



**OPERATING INSTRUCTIONS FOR  
8048-BW BUN WARMER (120V AND 220V MODELS)**

**TO USE:**

1. PLUG UNIT INTO A GROUNDED OUTLET WITH CORRESPONDING VOLTAGE.
2. TURN ON WARMER USING ROCKER SWITCH. UNIT WILL HEAT TO APPROXIMATELY 150 DEGREES F.
3. ALWAYS KEEP ROLLS IN A PLASTIC BAG. BY DOING THIS, THE ROLLS WILL ALWAYS BE WARM AND SOFT. THIS METHOD KEEPS THE MOISTURE IN THE ROLLS.
4. TURN UNIT OFF, WHEN NOT IN USE

UNPLUG THE UNIT BEFORE CLEANING.

**TROUBLESHOOTING**

Won't Heat	Check that unit is plugged in and power switch turned on
	Check power source for proper voltage and that receptacle is working. If receptacle is properly working and still no heat, call Nemco Customer Service at 1-800-782-6761.
Unit Blows Fuse or Circuit Breaker	Check to make sure circuit is not overloaded.

**CLEANING:**

THIS UNIT CAN BE CLEANED WITH A DAMP SPONGE AND MILD SOAP.

**DO NOT IMMERSE!**

**SERVICE PARTS LIST**

<b><u>Part #</u></b>	<b><u>Qty. Required</u></b>	<b><u>Description</u></b>
47214	1	POWER CORD 16/3 120V
46390	1	POWER CORD 16/3 220V
47216	1	STRAIN RELIEF
47234	1	ELEMENT 220 VOLT
47233	1	ELEMENT 120 VOLT
47231	1	ROCKER SWITCH 120V/220V
46983	1	WATER PAN
46295	2	DRAWER ROLLERS SET (EACH SIDE)
80100	1	DRAWER COMPLETE
80423	1	DRAWER REMOVABLE BASE
80017	4	FOOT



**NEMCO FOOD EQUIPMENT** 301 Meuse Argonne, Hicksville, OH 43526  
 Phone: (419) 542-7751 Fax: 419-542-6690 Toll Free: 1-800-782-6761  
[www.nemcofoodequip.com](http://www.nemcofoodequip.com)

47847  
3/31/11